



## ON/OFF


### DESCRIPTION OF BUTTONS

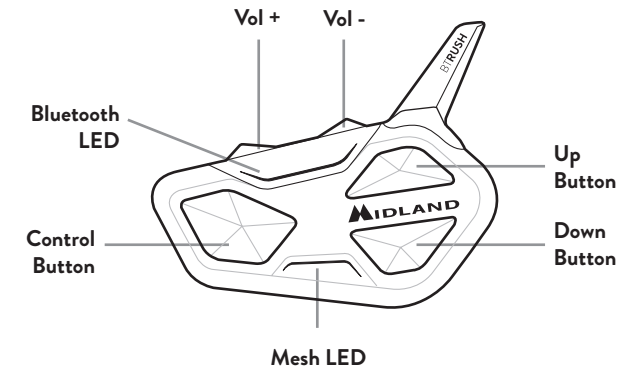

### SWITCH ON

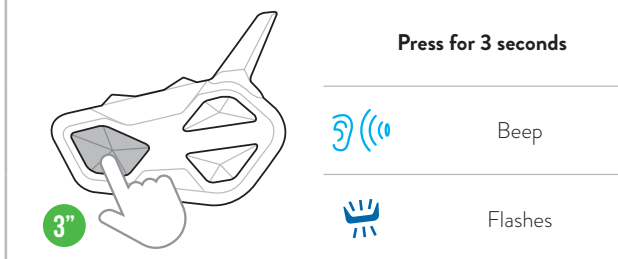


### SWITCH OFF

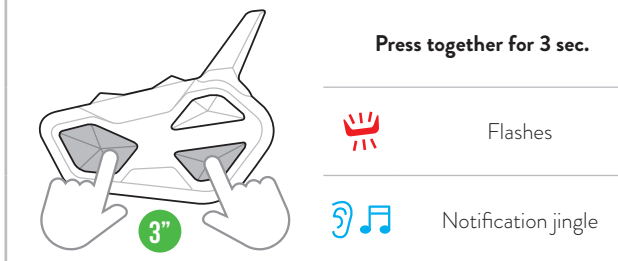


## PAIRINGS

### DESCRIPTION OF BUTTONS

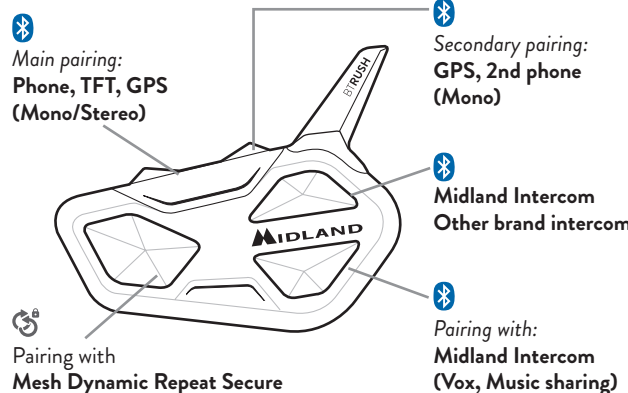


**ATTENTION:** To carry out any pairings you need to access Settings. If the Control button is pressed for fewer than 7 seconds, the device will switch itself on instead of accessing Settings. If this occurs, repeat the process.

### ACCESS SETTINGS

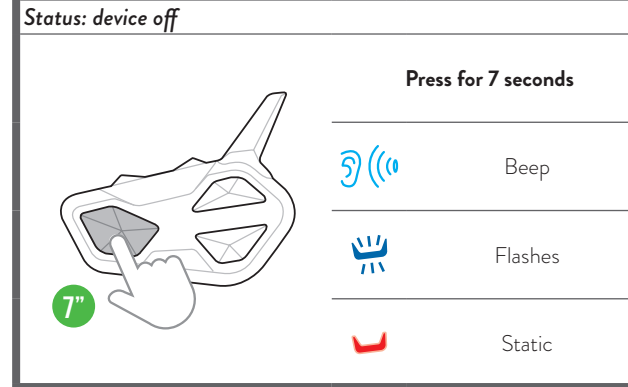


### PHONE, GPS, TFT PAIRING

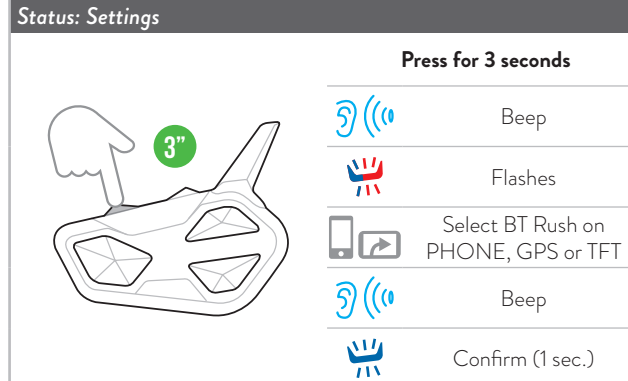


**Note:** to pair a 2nd device in mono audio, repeat this procedure using Vol -.

### MIDLAND INTERCOM PAIRING

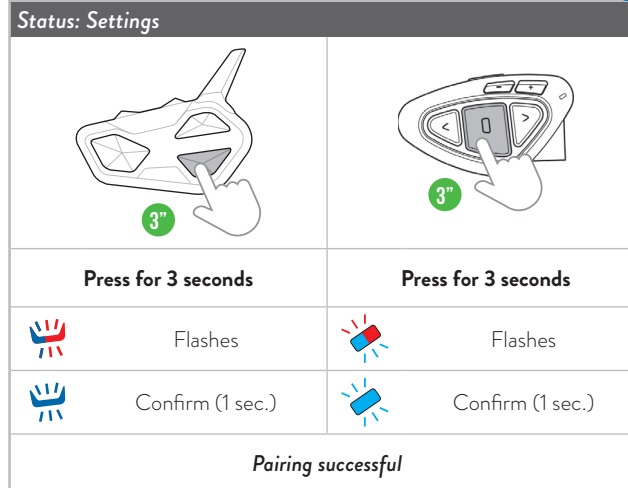


**Note:** to pair another BT Pro/Pro S intercom, follow the same procedure using the Up button.


### OTHER BRAND INTERCOM PAIRING

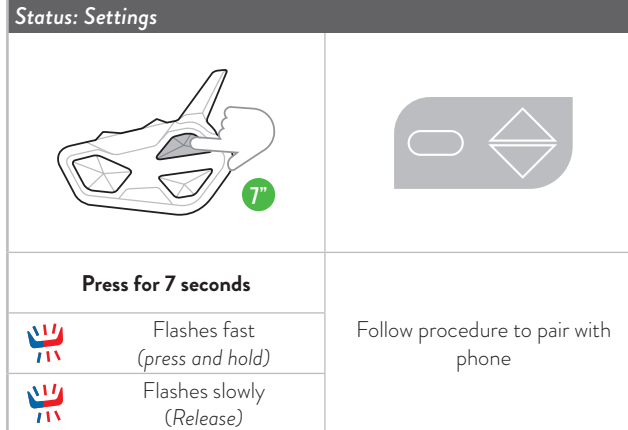


### MESH DYNAMIC REPEAT SECURE PAIRING

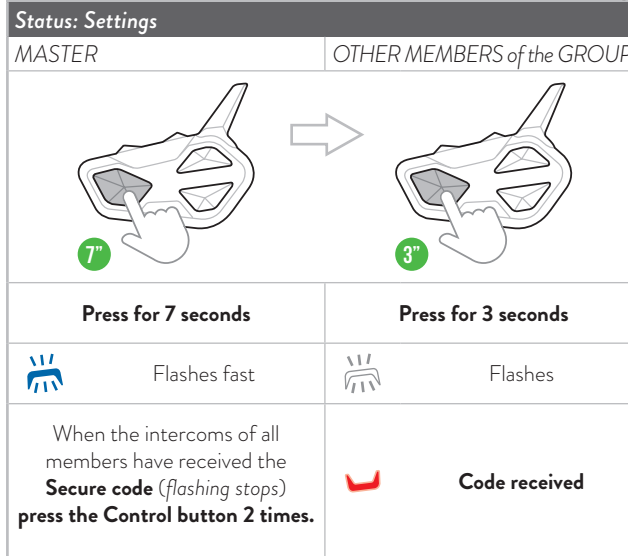


### RESET BLUETOOTH PAIRINGS

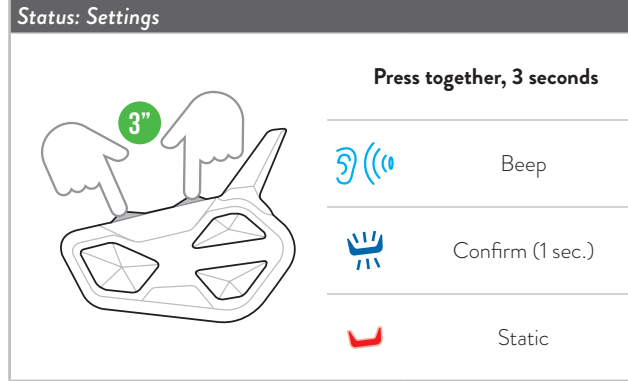

### MESH DYNAMIC REPEAT SECURE RESET

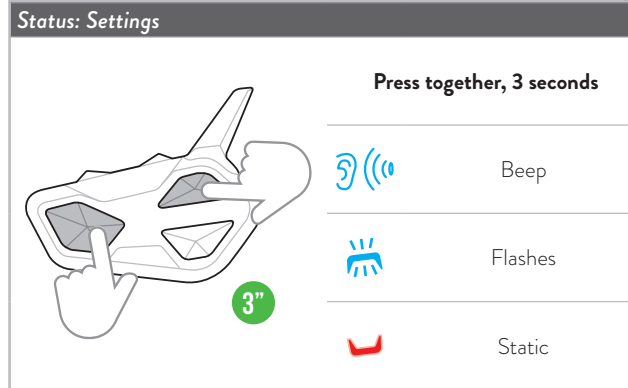

### EXIT SETTINGS MODE CANCEL PAIRING

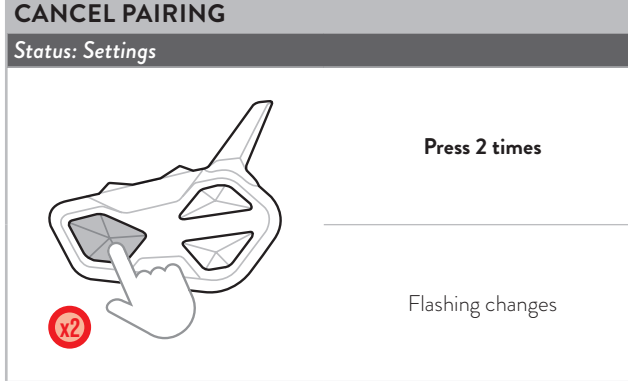

Go to our website [www.midlandeurope.com](http://www.midlandeurope.com), download the complete manual and the BT Updater software.

Customize your intercom with the BTPRO SetApp. Download it here:



POCKET GUIDE

## BTRUSH

MESH & BLUETOOTH CONFERENCE SYSTEM



HIGH DEFINITION SOUND BY RCF

MIDLAND


ENGLISH

# OPERATING MODES

- A. Intercom Mode:** to communicate with another device via Mesh or Bluetooth.
- B. Phone Mode:** for phone calls or for managing music.
- C. FM Radio Mode:** to listen to, search for and store radio stations.
- Note:** Phone mode is only active when there are devices paired to the Vol+/Vol- buttons.

## CHOOSE OPERATING MODE

Status: device on

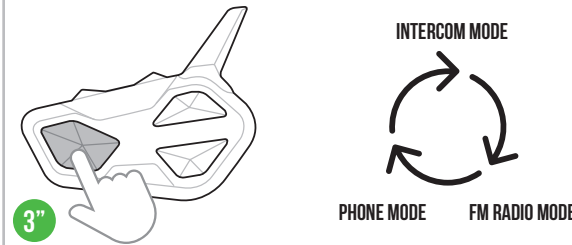

Press for 3 seconds to change mode or press and hold to scroll quickly

Operating mode status



**Note:** By pressing simultaneously Vol + and Vol - for 1 second, BT Rush communicates the selected mode.

## INTERCOM MODE


The default Mesh Group is set to Dynamic Repeat. For further information consult the online manual ([www.midlandeurope.com](http://www.midlandeurope.com)) or the tutorials on YouTube - Midland World.

### MESH IDENTIFICATION CODE (ID) SELECTION

Status: Intercom mode

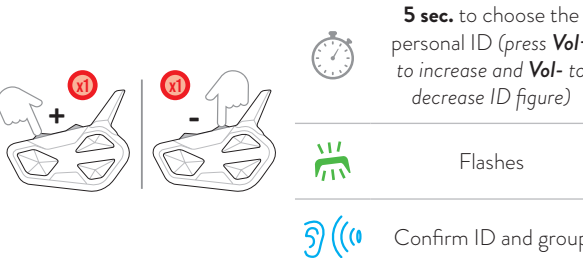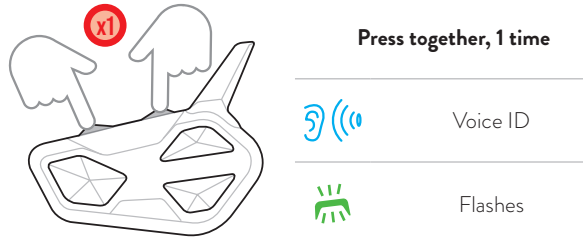


### FUNCTION DESCRIPTION

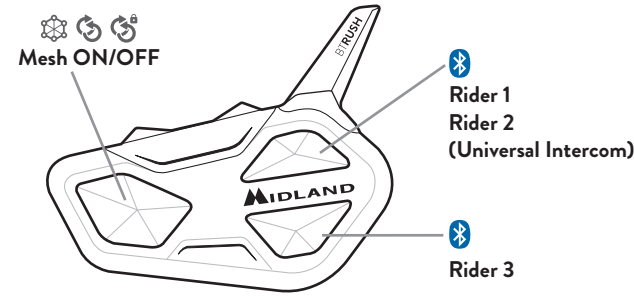


### MESH COMMUNICATION ACTIVATION/DEACTIVATION

Status: Intercom mode

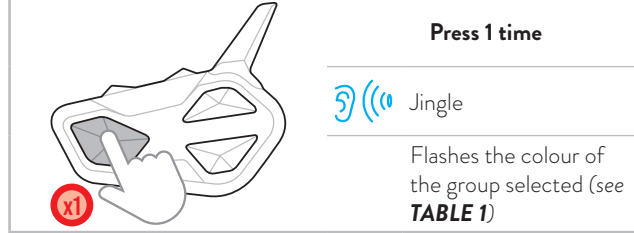

### INTERCOM MANUAL ACTIVATION/DEACTIVATION


Status: Intercom mode

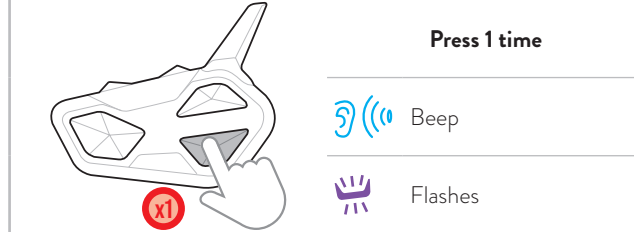

**Note:** to communicate with Rider 1 repeat the process pressing the Up button.

### INTERCOM VOICE ACTIVATION/DEACTIVATION

Status: in all modes

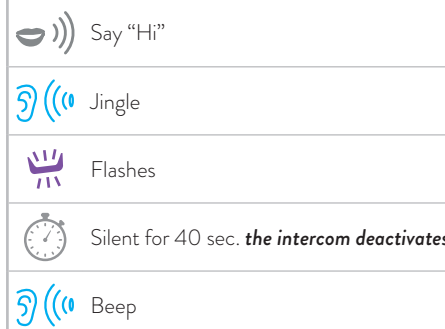

**Note:** Voice activation is only possible with an intercom paired with the down button.

### VOX ACTIVATION/DEACTIVATION


Status: in all modes



**SHORTCUT:** In Intercom mode pressing Control 2 times activates/deactivates the music.

### UNIVERSAL INTERCOM ACTIVATION/DEACTIVATION


Status: Intercom mode

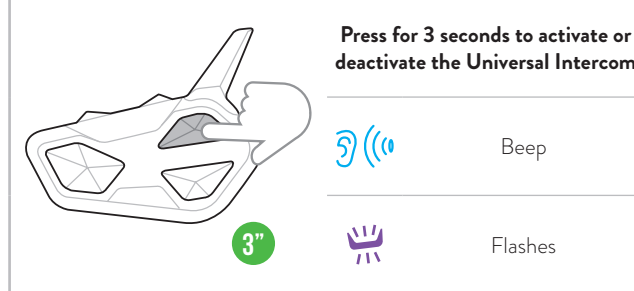

**Note:** to activate/deactivate the audio from a different brand device, use the voice call command (for some models it is necessary to send the voice call 2 times)

### SWITCHING FROM MESH CONFERENCE TO MESH DYNAMIC REPEAT


Status: all modes

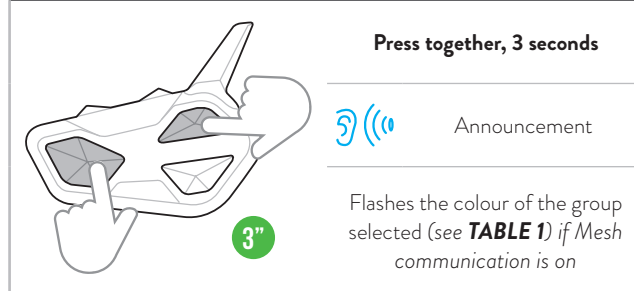

**SHORTCUT:** In Phone/FM Radio modes pressing Control 2 times activates/deactivates Mesh communication.


## PHONE MODE

### FUNCTION DESCRIPTION

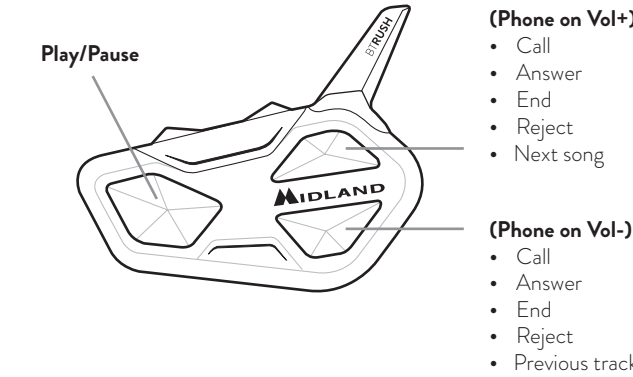

### MAKING A CALL

Status: Phone mode

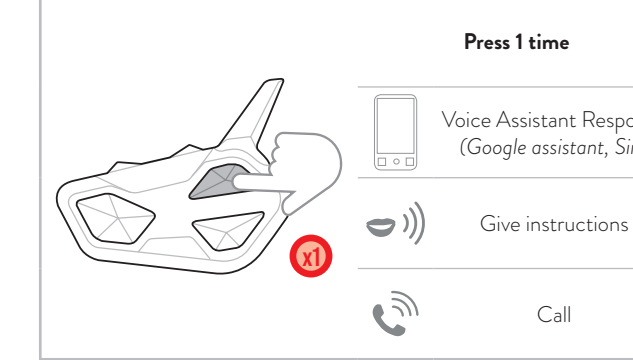


**Note:** If you have a phone paired with the Vol - button, use the Down button.

**SHORTCUT:** In Phone/FM Radio modes pressing the Down button 2 times turns the Intercom on/off.

### ANSWERING/ENDING A CALL REJECTING A CALL


Status: Phone mode

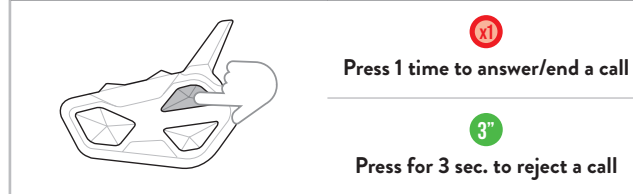

**Note:** If you have a phone paired with the Vol - button, use the Down button.


## MUSIC

Status: Phone mode

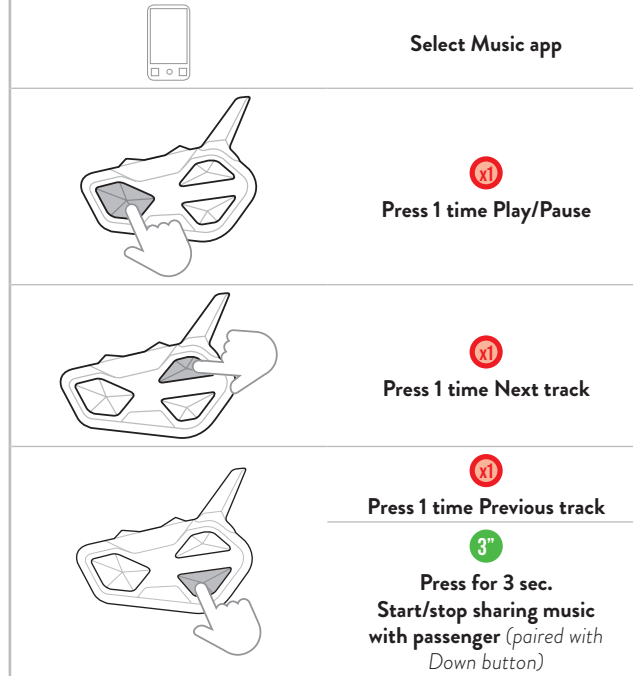

## RADIO MODE

### FUNCTION DESCRIPTION

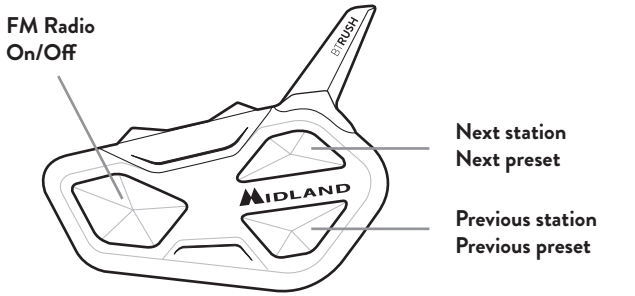

### FM RADIO

Status: Radio mode

