



G18 PRO

INSTRUCTIONS

PMR446 TRANSCEIVER

INSTRUCTION GUIDE







Thanks for choosing Midland!

G18 PRO is a portable transceiver that is free use in all European countries.



Midland G18 PRO is a multi-task PMR446 transceiver.

Its robust frame and the IP67 certification ensure a total protection from dust and from the immersion in water up to 1mt depth for 30 minutes.

G18 PRO is the ideal solution for your free time but especially in extreme conditions that require a reliable device.



INDEX

Programming software (optional)	2
What's in the box	2
Main features	2
Coverage/Range	3
Suggestions and warnings	3
Main controls and parts of the radio	4
Radio	4
LCD Display	5
Battery recharge	6
Operations	7
Power on/off and volume adjustment	7
Transmission and reception	7
Monitor	7
Roger Beep (end transmission tone)	8
Alarm function (Emergency)	8
Noise cancelling	8

Menu functions	9
Scan	9
PRI (Priority Scan)	9
VOX	9
POW – Setting the transmission power	10
Squelch	10
Scrambler	11
Led - Backlight	12
Keypad Beep on/off	12
TOT- TX timeout timer	13
SCAN mode settings	13
VOICE function	14
C-CDC / R-CDC / T-CDC	15
Dual watch	16
Name - Nome	16
Technical specifications	17
Troubleshooting	18

Programming software (optional)

Thanks to Midland Programming software PRG-G15, it is possible to increase the performance of your radio or to reduce its functionality by enabling or disabling some features (CTCSS, TOT, VOX, ROGER BEEP, SQUELCH, VOICE, RRM channel...)

For further information, please consult the Programming software manual.

Any attempt to change frequencies or output power of the radio invalidates the approval.

What's in the box

- 1 **G18 PRO** transceiver
- 1 belt clip
- 1 wall adaptor
- 1 Li-ion da 1600mAh rechargeable battery pack
- 1 fast desktop charger

Main features

- Extended frequency band: 446.00625 - 446.19375MHz
- 16 New PMR446 channels
- 99 PMR446 channels: 16 + 83 pre-programmed
- IP67 Certified
- Noise Cancelling in tx
- Military Standard MIL-STD 810G compliance
- Battery life up to 22hrs
- 50 CTCSS tones+105 DCS Codes
- RRM channel (only for Italy)
- Scrambler
- FM Radio and Componder (programmable with PRG-G15)
- Scan, Monitor and Vox functions
- Vocal announcement
- Dual Watch (programmable with PRG-G15)

Coverage/Range

The maximum range depends on terrain condition and is obtained during use in an open space.

The only limitation to maximum possible range are environmental factors such as blockage caused by trees, buildings or other obstructions. Inside a car or a metallic construction, the range can be reduced. Normally the coverage in the city, with buildings or other obstructions is about 1 or 2 Km. In open space but with obstructions like trees, leaves or houses the maximum possible range is about 4-6 Km. In open space, without obstructions and in sight, like for example in mountain, the coverage can reach 12 Km.


Suggestions and warnings

Your **G18 PRO** was designed to fulfill any warranty obligations and to enjoy this product for many years.

As for all the electronic devices, we recommend you to follow these suggestions:

- Do not attempt to open the unit. Non-expert handling of the unit may damage it and annul the warranty.
- When using regulated power supply, take note of the power voltage, that must be between 6V and 8V to avoid damages.
- High temperatures can shorten the life of electronic devices, and warp or melt certain plastics. Do not store the radio in dirty areas.
- If it appears that the Radio diffuses peculiar smell or smoke, please shut off its power immediately and take off the charger or battery from the radio.


MAIN CONTROLS AND PARTS OF THE RADIO

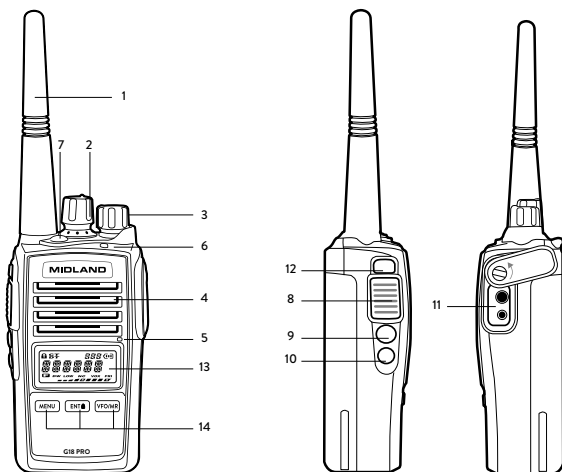

Radio

1. **Antenna**
2. **Encoder**: rotate clockwise or counter-clockwise to select the different settings.
3. **Power/volume knob**: turn clockwise to power on and increase the volume level. Turn counter-clockwise to decrease the volume level and power off.
4. **Speaker**
5. **Built-in microphone**
6. **Led indicator**: red: TX; green: RX.
7. **Emergency button** (it can be activated through the programming software)
8. **PTT**: push this button to transmit, release it to receive.
9. **Function key 1**: Short pressure: Monitor function activation (PF3). Long pressure: RRM (Rete Radio Montana) channel tuning.

10. **Function key 2:** Long pressure: SCAN function activation (PF4). Short pressure: Noise Cancelling activation.
11. **External Speaker/Mic Jack (Motorola type):** allows the connection with external devices such as headphones, microphones.
12. **Multi-function key "FUN":** it allows to activate secondary functions.
13. **LCD Display**
14. **Multi-function keys MENU - ENT - VFO/MR**

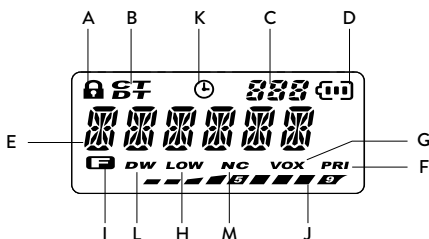

LCD Display

- A. Keypad lock
- B. Selected CTCSS tone or DCS code
- C. Number of the menu/channel indicator
- D. Battery status indicator
- E. Channel in use
- F. Priority scan mode
- G. VOX function activated
- H. Low power indicator
- I. Function key activated
- J. Indicator of rx and tx signal strength
- K. Channel temporarily not scanned
- L. Dual Watch function activated
- M. Noise Cancelling in tx activated

BATTERY RECHARGE

G18 PRO PRO is equipped for using a 7,4V Li-ion rechargeable battery pack, which can be recharged by connecting the socket of the AC/DC wall adaptor to a mains power socket and inserting the jack of the wall adaptor into the desktop charger plug. It takes 4 hours to fully recharge the radio.

The led of the desktop charger indicates the status of the recharge:

RED = charging

GREEN = full charge

For maximum battery life, we recommend you to charge the battery pack when the **G18 PRO** is off and the battery pack is fully discharged.

! Using a different battery charger other than the one specified can cause damage to your device or may even cause explosions and personal injuries.

The Battery power saving feature enables a reduction in consumption of up to 50% and saves the battery life. If it has been set, it automatically activates when the transceiver does not receive any signal for more than 5 seconds. Power saving can be disabled only through the Programming software.

OPERATIONS

Power on/off and volume adjustment

Rotate the **PWR/VOL** clockwise to turn the radio on.

Rotate the control clockwise/counter-clockwise to adjust the volume level as you prefer.

To turn the radio off, rotate the control counter-clockwise till you hear a mechanical "click".

Transmission and reception

To communicate, all radios in your group must be set to the same channel.

Briefly press the **Function key 1** to enable the Monitor feature, to make sure that the frequency is not busy, then press the **PTT** button.

Release the **PTT** key to receive.

Only one user at a time can talk during radio communications. Therefore, it is important not to transmit when you are receiving a communication and use the transmission mode sparingly to allow other users to talk.

Transmission consumes a significant amount of energy and should therefore be used sparingly to prolong the battery life.

If you are unable to contact a station that you have no problems in receiving, the station may be using CTCSS tones or DCS codes.

Monitor

The Monitor feature is for excluding (opening) the Squelch, in order to listen to signals that are too weak to keep the Squelch permanently opened.

Press briefly the **Function key 1** to enable such function.

Roger Beep (end transmission tone)

When the **PTT** button is released, the radio will beep to confirm to other users that you've finished your transmission and that they can start talking.

Roger Beep is disabled by default and can be activated through the programming software.

Alarm function (Emergency)

By pressing the **Emergency button**, the radio will switch to Alarm Emergency mode.

G18 PRO will switch to transmission for 30 seconds by generating a sound alarm, then for further 30 seconds will remain in tx to allow the user to communicate his status.

At the end, the radio will switch to reception.

If needed, the Emergency call can be repeated.

Note: this function can be activated through the optional programming software.

Noise cancelling TX

This function is associated with **Function key 2** (short pressure). When the Noise Cancelling is activated, the display will show NC.

The NOISE CANCELLING in TX mode allows to improve the transmission if you use the radio in noisy environments, so in presence of strong noises and sources of interference, that would cause a bad reception. Thanks to the powerful internal noise suppressor, the reception will become clear and "clean".

MENU FUNCTIONS

Here below is a list of the default functions that you will find in the menu of this radio.

First of all, you have to push the **MENU** button to enter and find the desired function.

Scan

This function is enabled by pushing the **Function key 2** for 3 seconds; you will see the channels scanning on the display of the radio.

Whenever any signal is detected, the scanning will stop on a busy channel. As soon as the signal is no longer detected, the scan will start after 5 seconds.

If you press the **PTT**, the radio will transmit on the latest busy channel; after about 5 seconds that you released the **PTT**, the scanning will be active.

PRI (Priority Scan)

When you activate this function, the radio will alternately scan the standard channels and the priority one.

The priority channel can be selected only with the programming software. The default priority channel is **CH1**.

VOX

The VOX feature enables hands free conversations without using **PTT**: just speak in the direction of the microphone and the communication will be automatically activated.

The **VOX** sensitivity can be adjusted in **10 different levels** (0,1,2,3...9) through the Menu or programming software:

OFF means that the VOX is turned off, level 1 is set by default and has the lowest VOX sensitivity, 9 is the highest one.

To activate the VOX levels, follow these steps:

1. Press the **MENU** button;
2. Turn the Encoder knob until the display shows "**VOX**";
3. Press the **ENT** key;
4. Turn again the Encoder knob and select the desired **VOX** level: 1= low sensitivity; 9= highest sensitivity.
5. Confirm your selection with the **ENT** key.

POW – Setting the transmission power

G18 PRO has 2 power levels.

To select the desired level:

1. Press the **MENU** button;
2. Rotate the Encoder knob till the display shows "**POW**";
3. Press **ENT**;
4. Rotate the encoder knob and select the desired power level;
5. Press **ENT** to confirm. If you selected the low power, the display will show "**LOW**"

By default, both low and high power are set at 500mW.

Squelch

The Squelch function suppresses noises on free channels and allows to receive even weak signals.

G18 PRO has 10 (0-9) different Squelch levels that can be set by programming software or Menu: 0 means that the Squelch is turned off; from level 1 to level 9 you will have different levels of noise reduction. The higher is the level, the louder will be the Squelch.

By default, the Squelch level is set on level 5.

To select the Squelch level:

1. Press the **MENU** button;;
2. Turn the Encoder knob until "**SQL**" is displayed;
3. Press the **ENT** button;
4. Turn the Encoder knob and select the desired Squelch level (the levels available are 10);
5. Confirm your selection with **ENT**.

Make sure you do not set an excessively high squelch level because in this case you may not be able to receive weaker signals. On the other hand an excessively low Squelch value could enable the Squelch even when no signals are present. Squelch must always be adjusted when no signals are present.

Scrambler

The scrambler is designed to protect communications. This feature prevents parties from other networks from hearing and understanding voice communications.

To enable/disable the scramble:

6. Press the **MENU** button;
7. Turn the Encoder knob until "**SCRM**" is displayed;
8. Push **ENT** to enter the function;
9. Turn the Encoder knob to activate/deactivate the SCRAMBLER: "**ON**" (to activate it), or "**OFF**" (to deactivate it);
10. Confirm your selection with **ENT**.

When the scrambler is enabled, it is not possible to clearly receive communications. Therefore, before enabling it, it is necessary to make sure that all the radios you wish to communicate with have enabled this feature, otherwise you won't be able to talk with them.

The scrambler of the transceiver does not fully guarantee the safety of communications.

Led – Backlight

To enable/disable the LCD backlight:

1. Press the **MENU** button;
2. Turn the Encoder knob until **"LED"** is displayed;
3. Push **ENT** to enter the function;
4. Turn the Encoder knob to activate/deactivate the Backlight. There are 3 available options: **"ON"**, **"OFF"** and **"AUTO"**. **AUTO**: the display backlight activates when you press any key and lasts for a few seconds. **OFF**: back light off. **ON**: backlight always on. Attention: in this mode the power save is off, therefore the battery consumption will increase.
5. Confirm your selection with **ENT**.

Keypad Beep on/off

Every time a button is pressed, you will hear a Beep tone. The keypad beep tone is activated by default.

To disable the beeps, follow this procedure:

1. Press the **MENU** button;
2. Turn the Encoder knob until **"BEEP"** is displayed;
3. Push **ENT** to enter the function;
4. Turn the Encoder knob to activate/deactivate the Beep tones: **"ON"** (to activate it), or **"OFF"** (to deactivate it);
5. Confirm your selection with **ENT**.

Keypad lock (KEYBO)

It is possible to choose between two types of Lock Mode:

6. Press the **MENU** button;
7. Turn the Encoder knob until **"KEYBO"** is displayed;

8. Push **ENT** to enter the function;
9. Turn the Encoder knob and choose between "**MANUAL**" or "**AUTO**".
10. Confirm your selection with **ENT**.

As previously mentioned, there are two ways to lock the keypad: "**MANUAL**": to lock the keypad, simply press **FUN** and **ENT** keys for 3 seconds **L** will be displayed. "**AUTO**": the keypad will be automatically locked after 20 seconds. To unlock the radio, press **FUN** and **ENT** keys.

TOT- TX timeout timer function

G18 PRO can be programmed with a transmission timer that temporarily blocks transmissions if the radio has been used beyond the maximum time permitted.

The radio is forced in reception mode if it continues transmitting after the preset timer threshold has been reached.

To restart the transmission, release the **PTT** key.

To enable this function:

1. Press the **MENU** button;
2. Turn the Encoder knob until "**TOT**" is displayed;
3. Push **ENT** to enter the function;
4. Turn the Encoder knob and set a timer from 30 to 270 seconds.
5. Confirm your selection with **ENT**.

SCAN mode settings

Come impostare la modalità di scansione:

Press **MENU** and then rotate the Encoder knob. The display will show "**SCANS**". Press **ENTER** and then rotate the Encoder knob to choose the type of Scan (TO/ CO/SE).

Confirm your selection with **ENT**.

TO: Time-operated Scan

Whenever a signal is detected, the radio will suspend the scan for 5 seconds, and then will continue to scan even if the signal is still present.

CO: Carrier-operated Scan

Whenever a signal is detected, the radio will stop scanning. It will resume to scan once the signal will disappear.

SE: Search Scan

The radio will stop scanning and exit the Scan mode once detected a signal. It is possible to exclude some channels from the scan list. Follow these steps:

- select the channel to exclude from the scan list
- keep pressed **ENT** for 4 seconds
- the display will show the symbol ⏸;
- to add the channel into the scan list again, follow the same procedure.

VOICE function

With this function, you activate a voice that informs you about any operation/selection you are doing.

To activate it, follow these steps:

1. Press the **MENU** button;
2. Turn the Encoder knob until "**VOICE**" is displayed;
3. Push **ENT** to enter the function;
4. Turn the Encoder knob to activate/deactivate the function: "**ON**" (to activate it), or "**OFF**" (to deactivate it);
5. Confirm your selection with **ENT**.

C-CDC / R-CDC / T-CDC

The CTCSS tones can be added to the channels for creating new private channels. They are similar to access codes and enable the radio to communicate only with the users that are tuned on the same channel and have set the same code. For each channel you can set up to 50 CTCSS tones and 105 DCS codes.

To select a CTCSS tone:

1. Press the **MENU** button;
2. Turn the Encoder knob till "**C-CDC**" (in TX and RX); "**R-CDC**" (only in RX) or "**T-CDC**" (only in TX) appears on the display;
3. Push **ENT** to enter the function;
4. Turn the Encoder knob and select the desired **CTCSS** tone
5. To confirm, press the **ENT** button.

The setting of a CTCSS tone disables all DCS codes, because these functions cannot be used simultaneously.

If you want to use and select a DCS code, instead of a CTCSS tone, follow these steps:

1. Press the **MENU** button;
2. Turn the Encoder knob till "**C-CDC**" (in TX and RX); "**R-CDC**" (only in RX) or "**T-CDC**" (only in TX) appears on the display;
3. Push **ENT** to enter the function;
4. Press the **Function key 1**;
5. Turn the Encoder knob and select the desired **DCS code**;
6. Confirm the selection by pressing the **ENT** button.

The setting of a DCS code disables all CTCSS tones, because these functions cannot be used simultaneously.

Dual Watch

This function allows to monitor two channels at your choice. Dual Watch can be activated through the programming software (optional).

This function can be activated either on **Function key 1 or 2**

Name - Nome

It is possible to choose and set a name that will appear on the display instead of the channel number.

Technical specifications

GENERAL

Frequency range	446.00625– 446.19375 MHz (PMR446)
Channels	16+83 pre-set
Working temperature	-20°+55°
Operating voltage	7.4V
Operative Mode	Simplex
Dimensions	113mm×56mm×38mm (Antenna excluded)
Weight	240g (Battery included)
Impedance	Antenna 50Ω
Duty cycle	5/5/90%

TRANSMITTER

Frequency stability	±2.5PPM
Output power	≤500mW ERP
Max frequency deviation	≤2,5KHz
Audio distortion	≤3%
Adjacent channel power	< 60 dB
Spurious radiation	Within European legal terms
Occupied bandwidth	Within European legal terms

RECEIVER

RF sensitivity	<0.2UV@20 dB SINAD
Audio distortion	≤3%
Audio response	300Hz ÷ 3KHz
Adjacent channel selectivity	Within European legal terms
Intermodulation rejection	Within European legal terms
Spurious emissions	Within European legal terms
Blocking	Within European legal terms
SAR	0,982W/Kg

WARNING: Direct plug-in ac/dc power supply must be used for disconnecting the transceiver from the mains; the desktop charger must be positioned close to the unit and easily accessible.

Troubleshooting

PROBLEM	POSSIBLE CAUSE	SOLUTION
The radio doesn't switch on	The battery pack is discharged and/or has not been installed correctly	Verify that the battery pack is charged and that it has been correctly installed
The radio switches off shortly after it has been switched on	Discharged battery pack	Recharge the battery pack
The battery pack does not recharge	The battery-charger has not been connected or installed correctly	Inspect the connections of the battery-charger and the installation of the batteries
The radio switches on but is unable to receive signals	The site of installation is too shielded	Move to an another are
	The volume is too low	Adjust the volume level
	Errato CTCSS o DCS	Check that the CTCSS tone or DCS code corresponds to the one set by the parties you are communicating with
It is not possible to communicate with other parties	An incorrect radio channel has been selected	Select the same radio channel used by the parties you are communicating with
	The radio is installed in a shielded area or is too far from the party you are communicating with	Move to an another are
	Incorrect CTCSS or DCS	Check that the CTCSS tone or DCS code corresponds to the one set by the parties you are communicating with

PROBLEM	POSSIBLE CAUSE	SOLUTION
Reception is fragmented and/or disturbed	The signal is very weak	Try temporarily to disable the Squelch by means of the Monitor feature
	The transmission distance is excessive and/or there are obstacles in the transmission path	Move closer to the party you are communicating with or to another area
	Other parties are using the same channel	Check the traffic on the radio channel by means of the Monitor feature and select another channel if required
	The radio has been installed too close to equipment that causes interference (televisions, computers, etc.)	Increase the distance between the radio and this equipment
The autonomy of the battery pack is limited	Transmission time is too long	Try to reduce the transmission time and/or use a low power



PRODUCED OR IMPORTED BY:

MIDLAND EUROPE Srl

Via R. Sevardi 7 - 42124 Reggio Emilia
Italia
www.midlandeurope.com

IMPORTED BY:

Alan-Nevada UK

Unit 1 Fitzherbert Spur Farlington Portsmouth Hants - PO6 1TT
United Kingdom
www.nevada.co.uk

VERTRIEB DURCH:

ALAN ELECTRONICS GmbH

Daimlerstraße 1g - D-63303 Dreieich
Deutschland
www.alan-electronics.de

IMPORTADO POR:

MIDLAND IBERIA, SA.

C/Cobalt, 48 - 08940 Cornellà De Llobregat - Barcelona
España
www.es.midlandeurope.com

IMPORTÉ PAR:

ALAN FRANCE S.A.R.L.

14 Draille des Tribales - Bât D - Lot n°6 - 13127 Vitrolles
France
www.fr.midlandeurope.com







MIDLAND[®]

www.midlandeurope.com